

## LIST OF SPARES

Item No.	Description	Pack	R2485	R2492	R1058
1	Seal Set (Super Heater, Steam Chest, Oil Chest)	set	X9535	X9535	X9535
2	PCBA Lights	1	X9536	X9536	X9536
3	Relay	1	X9537	X9537	X9537
4	Lights Board	1	X9538	X9538	X9538
5	Whistle	1	X9539	X9539	X9539
6	Valve Gear Set	set	X9540	X9540	X9540
7	Front Bogie	1	X9541	X9541/1	X9541
8	Pony Truck	1	X9542	X9542/1	X9542
9	Pistons	pair	X9543	X9543	X9543
10	Loco Wheel Set	set	X9544	X9544/1	X9544
11	Steam Reversal Unit	1	X9545	X9545	X9545
12	Pressure Valve / Super Heater	1	X9546	X9546	X9546
13	Oil Plug with Seal	1 + 1	X9547	X9547	X9547
14	Oil Plug Seals	4	X9548	X9548	X9548
15	Coupling Rod Set	set	X9549	X9549	X9549
16	Rev Arm / Joint	set	X9556	X9556	X9556
17	O-Ring Seals Glands	4	X9563	X9563	X9563
18	Piston Rod Seal Ring	4	X9217	X9217	X9217
19	Tender Wheels	set	X9198	X9198	X9198
20	Tyres	pack	X9207	X9207	X9207
21	Coupling Pack	pack	X9289	X9289	X9289
22	Tender to Loco PCBA Relay	1	X9304	X9304	X9304
23	Tender and Loco Connecting Pipe Assembly	1	X9199	X9199	X9199
24	O-Ring Seals Cylinder Block	4	X9287	X9287	X9287
25	Tender Contacts (Pick Ups)	pair	X9196	X9196	X9196
26	Super Heater	1	X9190	X9190	X9190
27	Tender Heater Inside Tank	1	X9189	X9189	X9189
28	Motor Assembly	1	X9203	X9203	X9203
29	Gear Assembly 1	1	X9207	X9207	X9207
30	Gear Assembly 2	1	X9210	X9210	X9210
31	Tender Connecting Screws	pack	X9200	X9200	X9200
32	Seal Ring for the Bolt Tender / Loco Connecting Pipe	1	X9201	X9201	X9201
33	Thermostat Cutout	1	X9204	X9204	X9204
34	Overflow Seal Ring	4	X9193	X9193	X9193
35	Worm Gear Shaft 2	set	X9210	X9210	X9210
	Loco Bodies	1	X9550	X9558	X9550
	Tender Bodies	1	X9551	X9559	X9551





