


Coach Spares Not Illustrated	pack	R1071, R2379A
Front Bogie	1	X3446
Rear Bogie	1	X3447
Artic Coach	1	X3450
Coach Bogie Corridor End	1	X6031
Bogie Camplate A / B Corridor End	1	X8289
Bogie Clip Eurostar	2	L7782BL/1

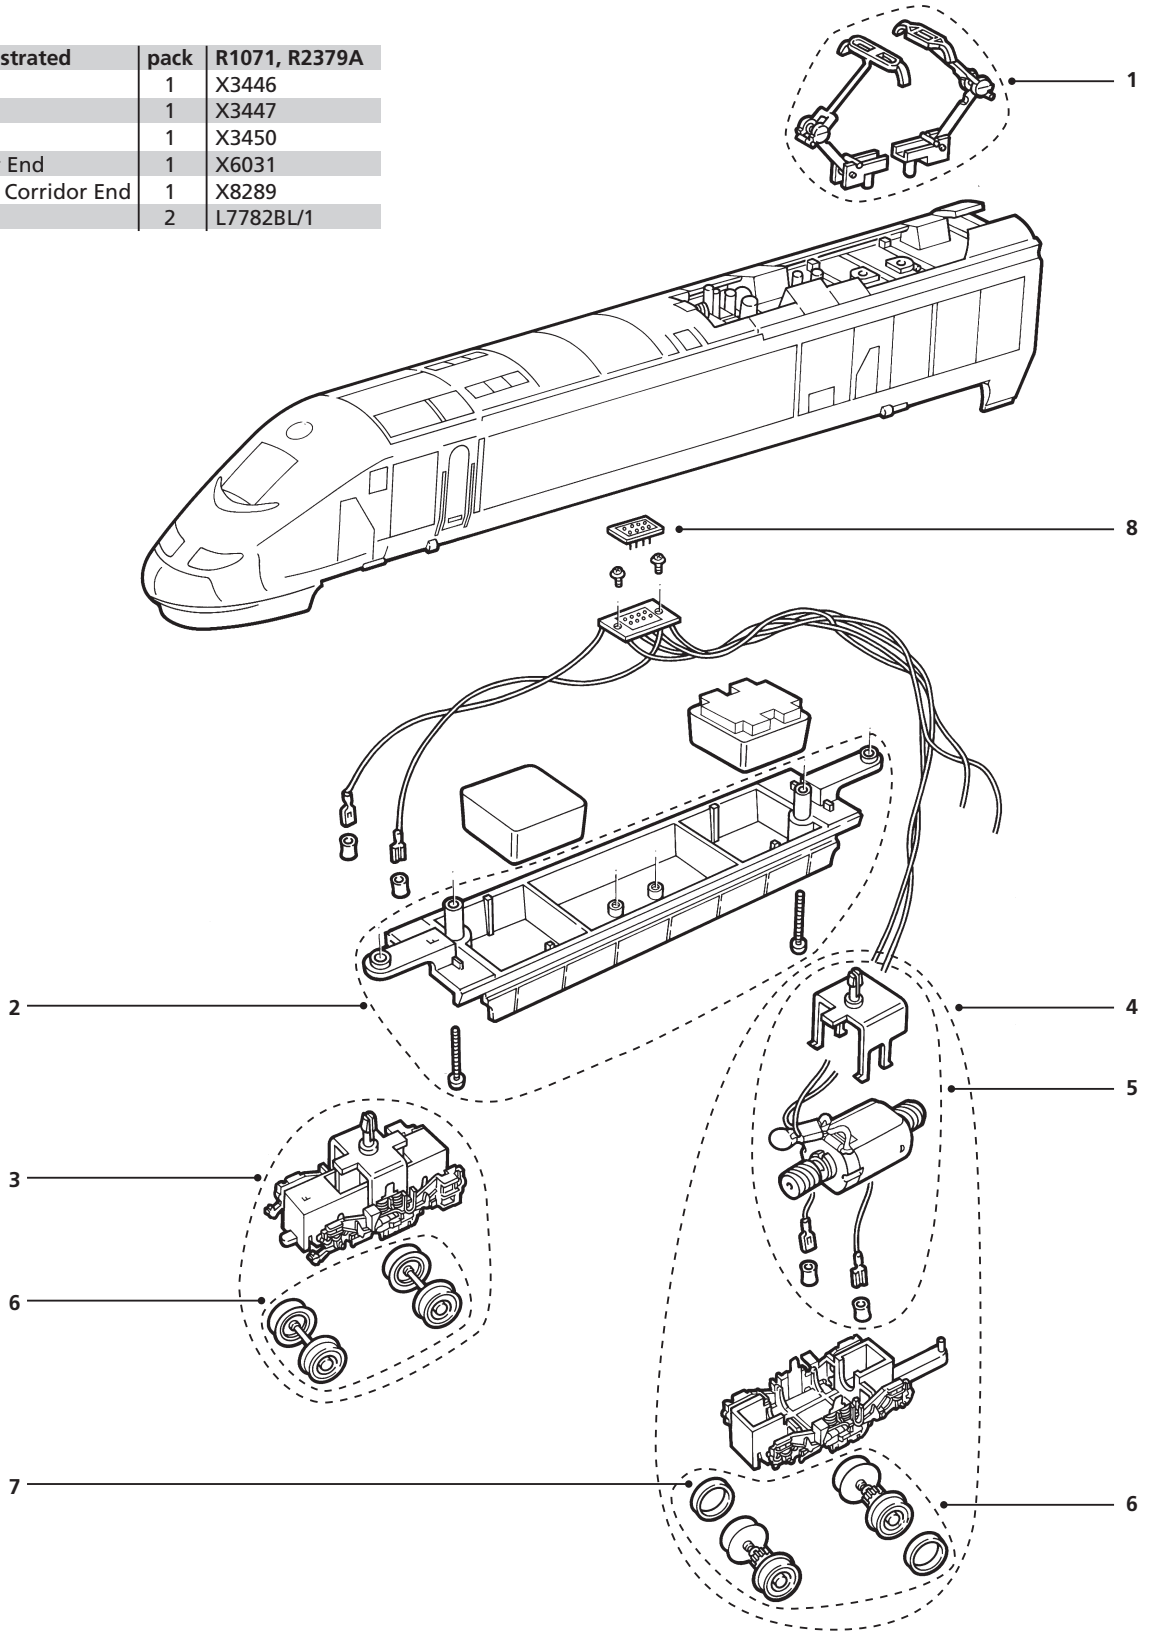

LIST OF SPARES

Item	Description	Pack	R1071, R2379A
1	Pantograph A and B	1 + 1	X6027
2	Underframe with Screws	1	X6032DC
3	Front Bogie Complete	1	X3441
4	Power Bogie Complete	1	X3437DC
5	Motor and Retainer with Wires	1 + 1	X6028DC
6	Power Car Wheel Set	2 + 2	X6029
7	Traction Tyres	4	X6030
8	Pins DCC	1	X9255